

Unpacking Your Heat Press


After unpacking please retain the box and packaging as it is required as part of the warranty



Place the unopened heat press box on its side.



Open the underside of the box and fold back flaps.

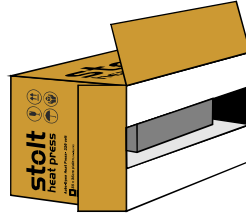

Rotate box to correct orientation. Open the top of the box and then lift box up.

Connecting Your Heat Press

The control panel is packaged separately and comes with a set of screws and an allen key.

The control panel has 2 connection sockets on the underside.

There is a cable tie holding 2 cables at the top of the heat press, carefully cut this cable tie.

On the control panel unscrew the blue protective cap (A) and connect the blue ended cable from the main heat press, lining up the pins into the connector.

Tighten the blue screw gland (B).


The smaller cable (C) has a lug so it needs to be lined up. When inserted tighten the screw gland (D).

Slide the control panel over the locating lugs on each side of the base (E). If you feel any resistance ensure the blue protective cap does not get in the way (F).

When seated correctly attach with 4 of the black ended screws.



Control Box Underside

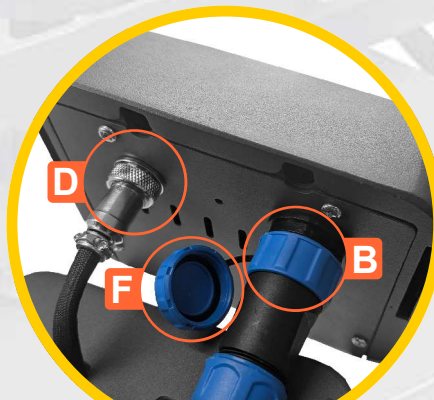

Control Box Cables



Control Box Mounting

Use the allen key to remove the bolt that is screwed into the heat press magnet.

Insert the power cable and flip the power switch on the back of the control panel.






Platen Shipping Screw





Connecting The Power


Setting The Temperature

Press  The current temperature will flash


Press  or  to select the required temperature



Press  to set the temperature

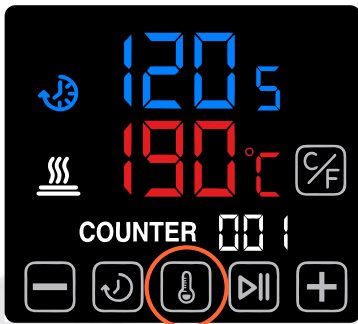
If the temperature has been increased the heating icon will flash until the required temperature is reached. 



Setting The Timing


Press  The current time setting will flash


Press  or  to select the required time in seconds

Press  to set the timing



Setting °C or °F

Press  to toggle between Celcius & Fahrenheit

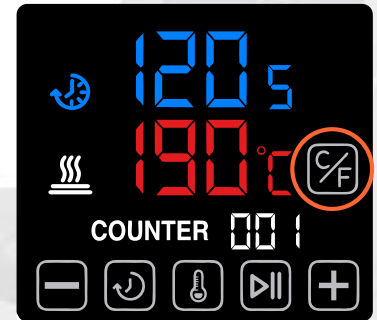

Resetting The Counter

Press  for 8 seconds



Closing The Platen


Use the handle to bring the platen down gently.

The magnet will then lock the platen in place and the **timer countdown will start automatically.**

Opening The Platen

The heat platen will **automatically open** when the timer reaches zero.

5 seconds before this happens the press will beep to warn you to stand clear.

If you need to open the platen when the timer is running Press 

DO NOT FORCE THE PLATEN HANDLE UP BY HAND



Please Note

The Auto-Open feature will not work if the pressure is too low or too excessive.



Need technical support?



Call 0151 272 1234